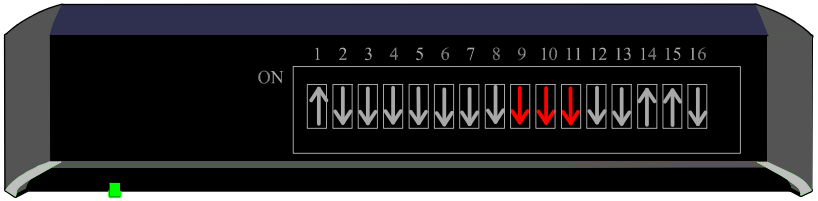

Interior OA-FLEX T

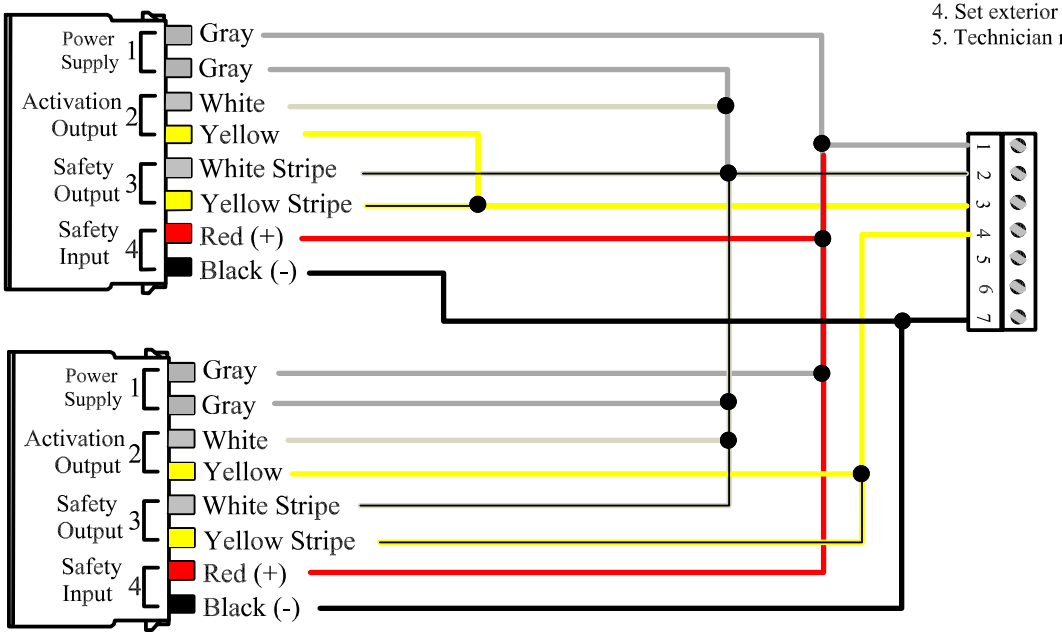

Notes:
1. Verify proper door operation prior to final connection of sensors.
2. Enable monitoring see OPUS CONTROL SETTINGS below.
3. OA-FLEX T Dipswitch should be set:
   Dipswitch 9 OFF (down) "N.O." Activation output
   Dipswitch 10 OFF (down) "N.O." Safety output
   Dipswitch 11 OFF (down) "High" for proper monitoring operation.
4. Set exterior OA-FLEX T sensor, dipswicth 5 ON.
5. Technician must perform a field test to verify substantial compliance with ANSI/BHMA A156.10 Section 8.

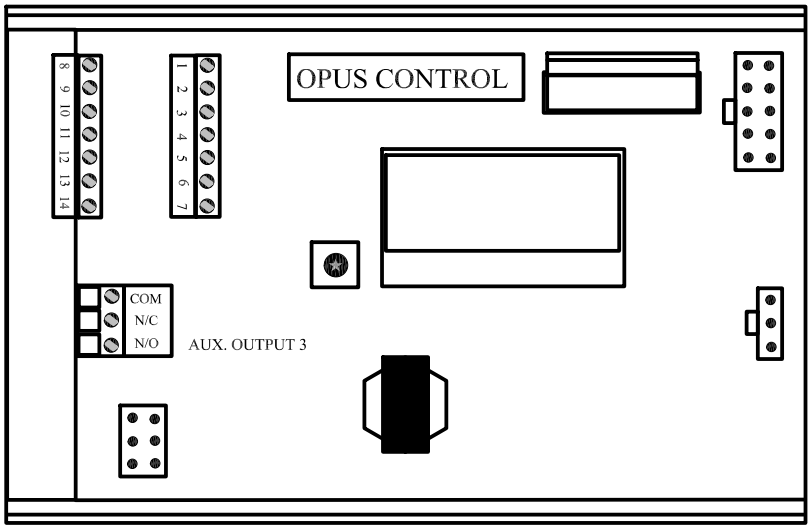

Exterior OA-FLEX T

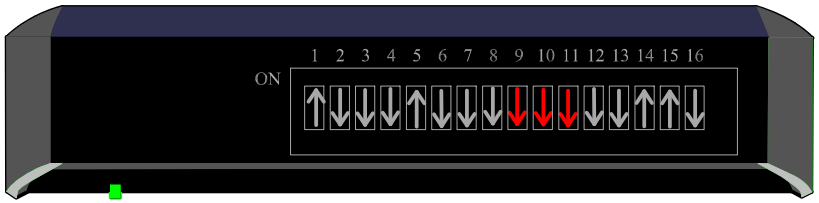

OPUS CONTROL SETTINGS:

1. Output 1, should be set to "Sensor Monitoring (N.O.)"
2. 61 Monitoring, should be set to "ACTIVE"
3. 62 Monitoing, should be set to "ACTIVE"

Title: 16300280 NABCO OPUS with OA-FLEX T		Drawing # 16300280
Drawing By: RNG	Date: 7/31/16	Sheet: 1 of 1

Optex Technologies Inc.
18730 South Wilmington Ave. Suite 100
Rancho Dominguez, CA 90220
Office: (800)877-6656, Fax: (310)898-1098