161 Prep

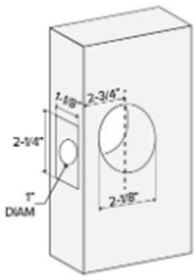

The "**161 Prep**" is designed for cylindrical lock installations. It features a bore center (the **backset**) positioned 2-3/4" from the edge of the door and a bore diameter of 2-1/8". There is an edge preparation of 1-1/8" x 2-1/4" to accommodate the lockset **latch**. This prep is suitable for most cylindrical handle sets with a 2-3/4" backset option.

161 – DL Prep – Has preps for both 161 lever set and deadbolt above

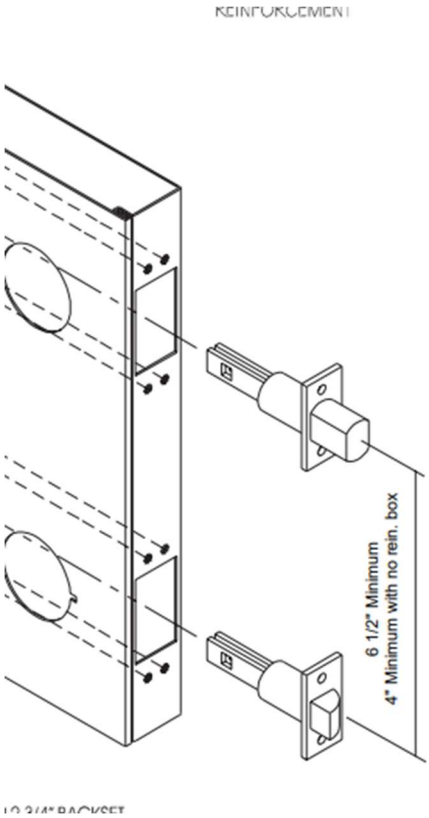

161 LOCK PREP WITH
DEADBOLT PREP

161-T prep – Turtle Prep

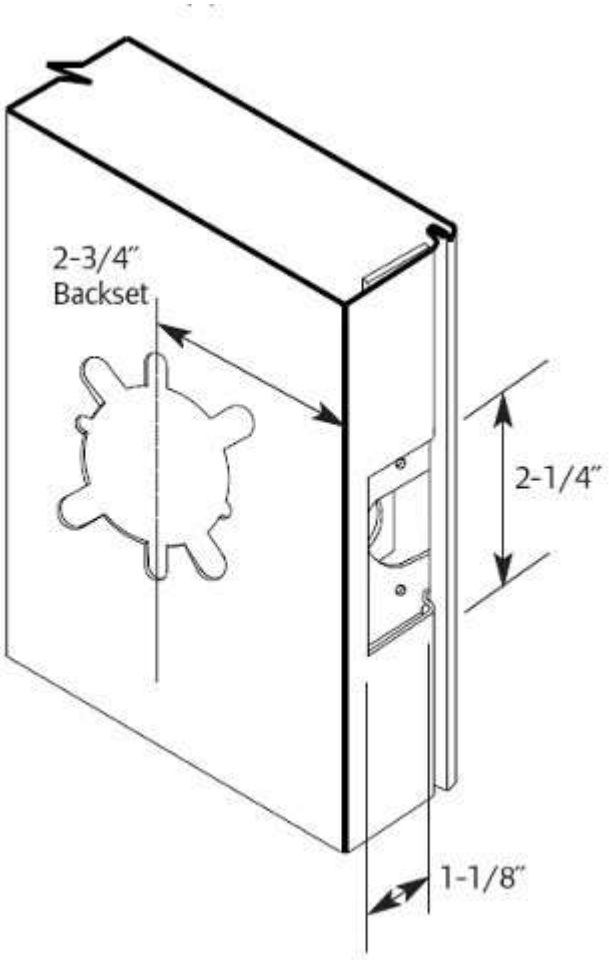

PBBP prep – blank slab w/ a backing plate to mount Rim Exit

FB/ASA – Inactive door will have Flush Bolt and Strike preps

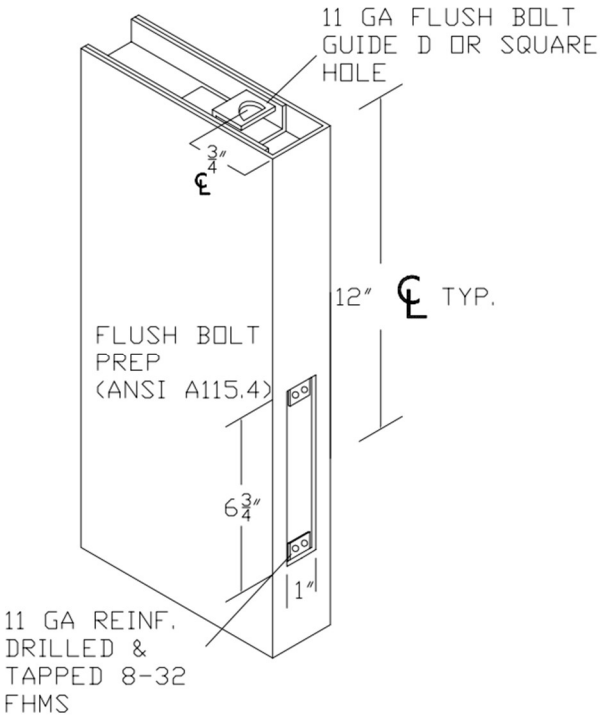

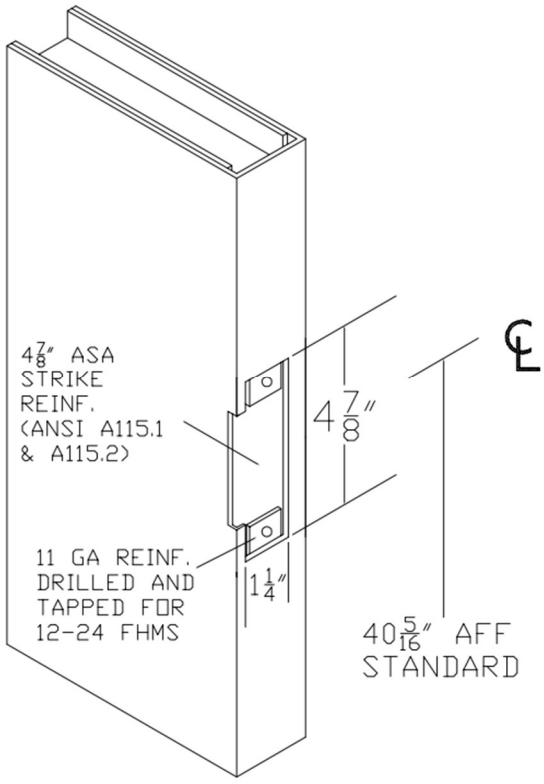

86 Edge Mortise Pocket

The “86 Edge” is a mortise lock prep option that involves a door edge preparation of 1-1/8" x 8". It is designed for attaching the lock box to the door edge and does not include any face preps. Please note that doors with this prep must be special ordered at this time.

86 Edge Mortise Pocket with Function Holes

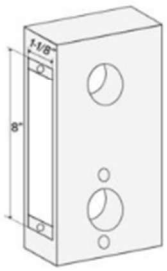

Similar to the 86 Edge Mortise Pocket, this option includes function holes cut into the face of the door for the lockset. The specifications for these holes can vary in terms of diameter, quantity, and location, depending on the lock manufacturer and function. This prep is often done in the field but must be special ordered at this time and requires a template.